

DUAL MOTOR STANDING DESK

USER MANUAL



Universal version

Please learn this manual carefully before installation

I . Matters needing attention



1. Safety warning

- Improper use of this product may cause personal safety
- Before using the table, check the environment around the table. If the body or object is trapped in a stationary obstacle and the table's range of motion, it may be pressed
- When operating the desk, make sure that the power cord is long enough. If the monitor, computer, speakers, and anything with a cord are not long enough, they may be pulled off during the movement of the desk, causing items to fall and damage
- Please provide this manual to any users, installers and technicians who operate the product

2. Using

- This height-adjustable table contains an electric motor and is only suitable for dry work areas; because the height of the table can be adjusted, it is convenient for individuals to set the most ergonomic height; this product cannot be used in high humidity or humid environments
- Do not move forcibly, put down the table frame, do not sit or stand on the table frame, to avoid potential safety hazards
- Children must use this product under adult supervision
- Liability: In any case, except for the description in this operation manual, the manufacturer will not accept warranty claims and compensation liabilities caused by incorrect use


3. Setup and Installation

- After the product is assembled, adjust the caster nut to make the table level. After fixing the position, check whether the wire is intact and whether there is any damage, etc., connect the table to the 110V ~ 220V socket, and use it normally
- When placing this product, ensure that there is enough space and at the same time keep a safe distance from other furniture items. Do not place objects higher than 50cm (20 inches) under the table
- After the table is assembled, when you want to move the table, do not lift the table alone when lifting the table.
- Lifting the table alone will cause damage to the connecting parts and the fasteners of the table top. Grasp the table legs and move them slowly

4. Warranty terms

- The supplier provides 36 months free warranty service for the product from the date of delivery (motor warranty is 20000 times)
- During the warranty period, if the returned product has quality defects after inspection, the supplier will repair or replace it for free
- The following scope does not belong to the free service scope:
 - Exceeding the warranty period, failing to use, maintain and store the product in accordance with the requirements of the product instructions, causing damage; Users disassembling and modifying without permission, using controllers and hand controllers not provided by the supplier, or damage caused by force majeure
- In addition, all product repairs are sent to the supplier's factory for repair
- This product is not equipped with a panel, customized samples do not use this manual


II. Tool & Parts Diagram

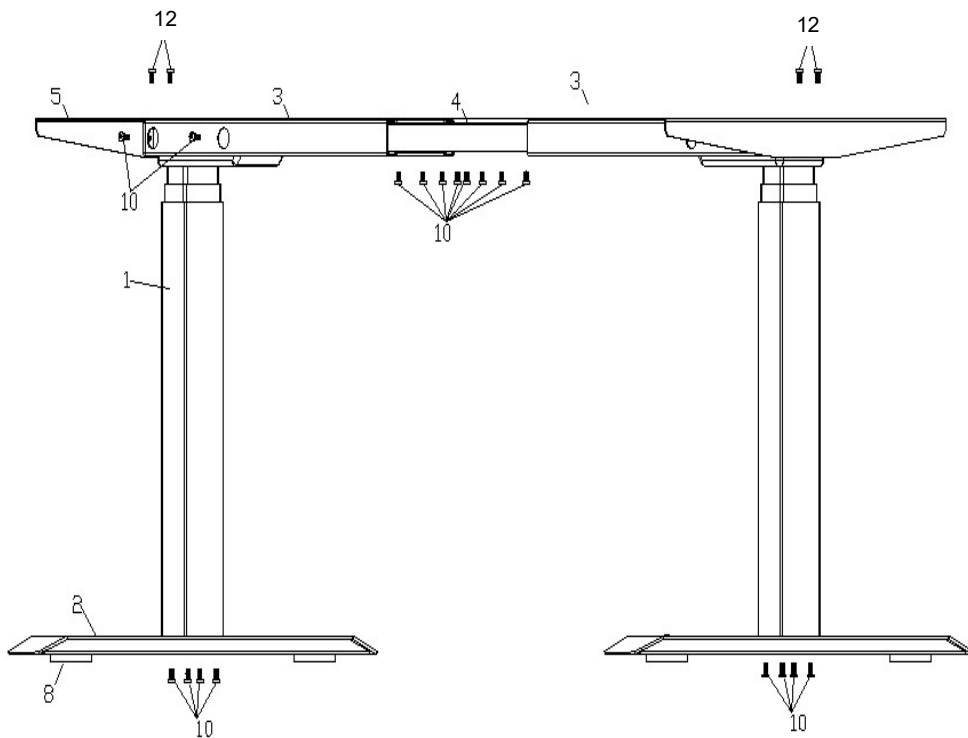


① Column*2



 ② Foot*2




③ Frame*2

 

④ Connecting rod*2



 
⑤ Side board*2



⑥ Controller*1



 ⑦ Handset*1



⑧ Casters*4



⑨ Power cable*1



⑩ M6 screw*25



⑪ Self-tapping screws*15



 
⑫ M6 countersunk screw*5



⑬ Line snaps*3



⑭ Allen wrench*1




⑮ Cushion washers*10




III. Assembly instructions


- Check and make sure that all parts meet the above list. Insert the slot of the cross bar (④) into the middle of the frame (③). At the same time, pay attention to the overlap length of the cross bar (④) and the frame (③)

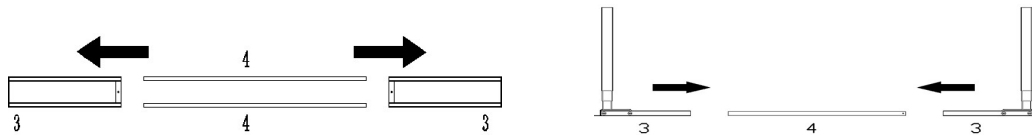


- Insert the two columns (①) into the frame (③) and arrange them left and right

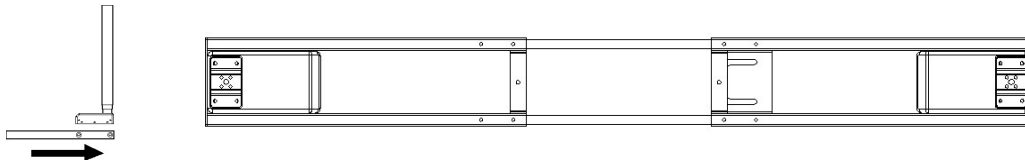


- Use an M6 hexagon socket screw (⑩) to pass through the hole, connect the frame (③) and the column (①), use an Allen wrench to tighten the screws, the other side is the same
- In the same operation, connect the frame (③) and the cross bar (④).
- Note: No need to tighten the screws, just rotate 2-3 rings

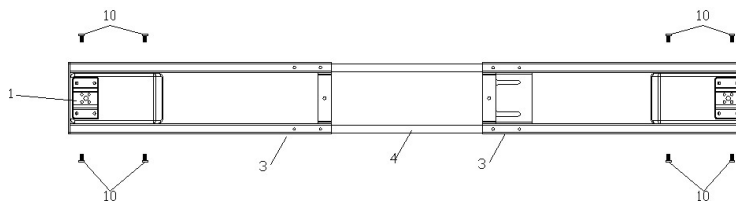

- Take the foot (②) and fix it with the column (①) with M6 hexagon socket screws M6x12 (⑩), and tighten

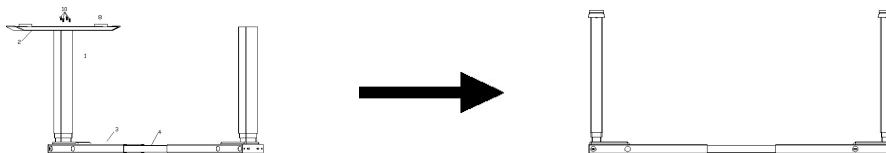

- Take the side board (⑤) and fix it with the frame (③) with M6 countersunk screws (⑫) and tighten

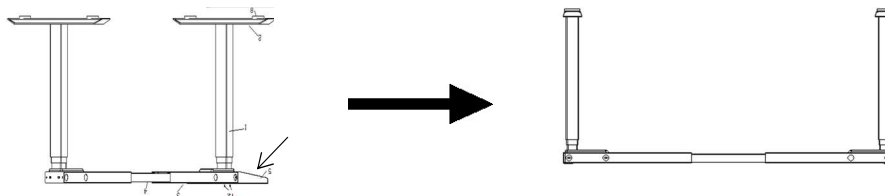


- Place the table top carefully under the table frame, adjust the width of the desk frame to fit the desktop by stretching the frame.
- It is recommended to leave 5cm-10cm away from the side of the desktop
- Check again if the base is in the center under the desktop




- Use an Allen wrench to tighten the frame (③) and the Connecting rod (④), please check whether the screws are too long for your desktop, and ensure that they will not penetrate the top surface when screwing in


- It is recommended to drill the positioning holes for the desk frame and the desktop in advance. Note: Please check both ends of the desktop to ensure that there are no through holes
- It is strictly forbidden to fix the desktop forcibly. Strong pressure will cause damage to the desktop. Ensure that any screws used will not pierce the desktop.
- Fix the table frame and desktop, use self-tapping screws (⑩) for fastening

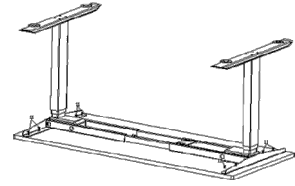


- Snap the controller (⑥) into the M-type slot of the corresponding frame

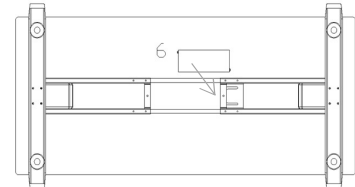

- It is recommended to drill the positioning hole of the fixed handset (⑦) to the desktop in advance to ensure that there is enough space for cable connection
- Do not over-tighten the screws and cause the plastic parts to break
- Use self-tapping screws (⑩) to tighten
- Place the front of the hand controller flush with the front edge of the desktop, and it is recommended to place it on the left and right sides of the desktop

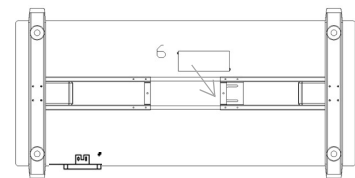

- Connect according to the following figure, use Line snaps (⑧) to fix the connection line

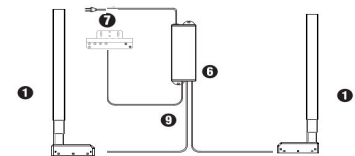

- Turn the assembled desk upside down (two people are required), grasp the bottom of the desk (not the desktop), then turn the desk, adjust the leveling studs on the foot as needed
- Ensure that there are no obstacles in the table passage, and all cable lengths adapt to height changes
- Insert the power plug (⑨) into the 110V or 220V socket
- Press and hold the key (⏻) for 3 seconds, the hand controller displays rES (Reset), and then release it, the table starts to move down to the end and rebounds to a certain height, the reset is completed and the minimum height is displayed
- Select the appropriate height, press S or M, select 1/2/3/4

IV. Troubleshooting

1. Reset instructions

- The newly installed desk (showing E10) needs to be reset after re-plugging in the connector,
- if there is an error message on the hand controller, there is no response when trying to raise or lower,
- unplug the power cord;
- reinsert the power cord;
- press and hold the down button of the hand controller until the post reaches its lowest point and the reset mark appears, releases the lower button, the hand controller will display the height, and your standing desk will be used

2. Common troubleshooting

- Resistance protection: display "E02", the desktop will vibrate, be impacted or the desktop is tilted during the exercise, and the alarm will be stopped immediately, and the reverse motion will be automatically released after the set distance, or press any key to stop and release during the reverse operation.
- It should be checked and ensured that the table will not vibrate greatly, hit obstacles or tilt during operation.
- Overheating protection: display "Hot", continuous long-term operation may activate this protection, you should re-power on or wait at least 18 minutes before using it.
- Motor abnormal protection: display "E10", power off, recheck and make sure the connection between the motor and the controller is reliable, and then power on again
- Overload protection: display "E20", this alarm appears when running upwards, you should remove some heavy objects on the table before running; if this alarm appears when running downwards, you should cut off the power, remove some heavy objects on the table, and then restart
- Power-on
- Undervoltage protection: display "E31", power off, recheck and make sure the connection between the power supply and the controller is reliable, and then power on again
- Overvoltage protection: display "E32", power off, recheck and make sure the connection between the power supply and the controller is reliable, and then power on again

3. Safety reminder

- When power is cut off or the power cord is unplugged, manual reset is required (please refer to the reset instructions above)
- The design work system of this product is 10% (2 minutes of continuous work, 18 minutes of rest)
- Children need to use this product reasonably under the supervision and company of an adult
- Do not open any parts: columns, controllers, hand controls, to prevent damage to the product and electric shock, etc.
- Keep all electrical parts away from the liquid



Factory inspection

