Single motor lift table User manual



Universal version

Please learn this manual carefully before installation

I. Matters needing attention

1. Safety warning

- > Improper use of this product may cause personal safety
- > Before using the table, check the environment around the table. If the body or object is trapped in a stationary obstacle and the table's range of motion, it may be pressed
- > When operating the desk, make sure that the power cord is long enough. If the monitor, computer, speakers, and anything with a cord are not long enough, they may be pulled off during the movement of the desk, causing items to fall and damage
- > Please provide this manual to any users, installers and technicians who operate the product

2. Using

- > This height-adjustable table contains an electric motor and is only suitable for dry work areas; because the height of the table can be adjusted, it is convenient for individuals to set the most ergonomic height; this product cannot be used in high humidity or humid environments
- >Do not move forcibly, put down the table frame, do not sit or stand on the table frame, to avoid potential safety hazards
- >Children must use this product under adult supervision
- >Liability: In any case, except for the description in this operation manual, the manufacturer will not accept warranty claims and compensation liabilities caused by incorrect use


3. Setup and Installation


- > After the product is assembled, adjust the caster nut to make the table level. After fixing the position, check whether the wire is intact and whether there is any damage, etc., connect the table to the $110V \sim 220V$ socket, and use it normally
- > When placing this product, ensure that there is enough space and at the same time keep a safe distance from other furniture items. Do not place objects higher than 50cm (20 inches) under the table
- > After the table is assembled, when you want to move the table, do not lift the table alone when lifting the table.
- >Lifting the table alone will cause damage to the connecting parts and the fasteners of the table top. Grasp the table legs and move them slowly

4. Warranty terms

- > The supplier provides 36 months free warranty service for the product from the date of delivery (motor warranty is 20000 times)
- >During the warranty period, if the returned product has quality defects after inspection, the supplier will repair or replace it for free
- >The following scope does not belong to the free service scope: Exceeding the warranty period, failing to use, maintain and store the product in accordance with the requirements of the product instructions, causing damage; Users disassembling and modifying without permission, using controllers and hand controllers not provided by the supplier, or damage caused by force majeure
- >In addition, all product repairs are sent to the supplier's factory for repair
- >This product is not equipped with a panel, cusfomized samples do nof use this manual


II. Tool & Parts Diagram

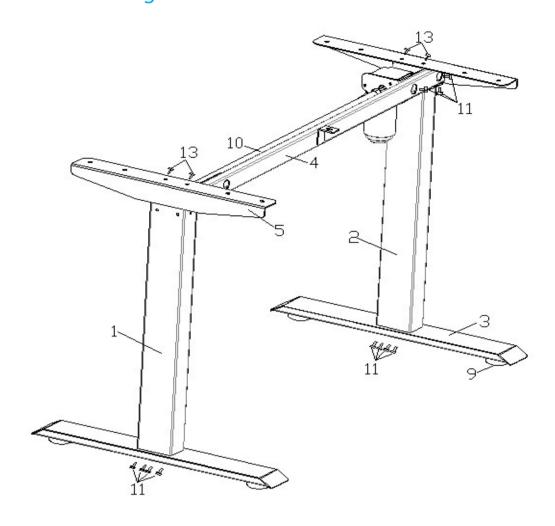

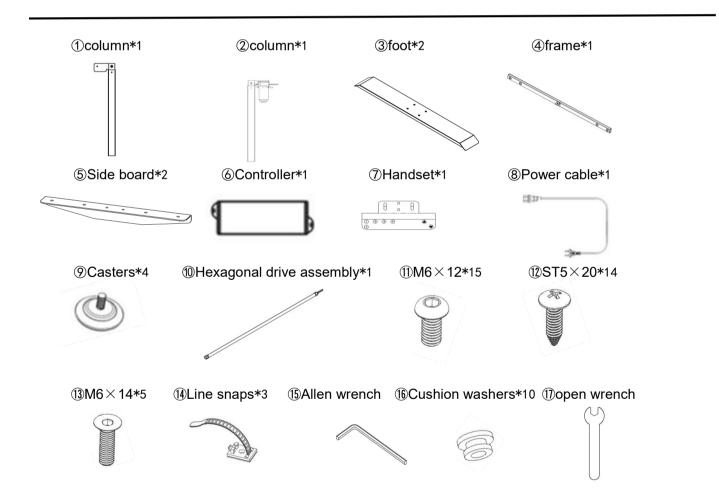


III. Assembly instructions


➤ Check and make sure that all parts meet the above list. The two columns (① and ②) were placed upside down, the legs (③) were installed on the legs using M6 screws, and four casters (⑨) were installed on the legs after completion.

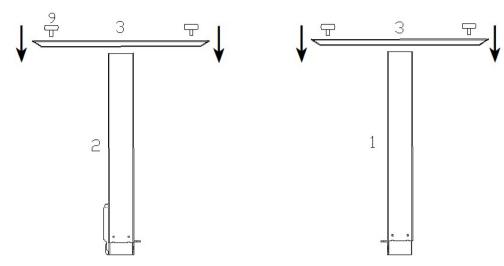

After straightening the column, place the fixing frame (4) at the bending part of the column and fix it with M6 screws (4 screws on the side and 2 screws on the bottom)

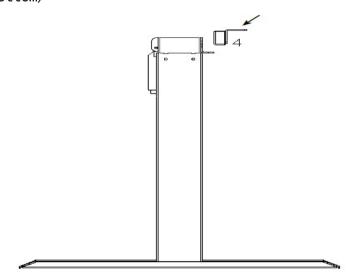

> The side plates (5) were fixed on the column with M6 countersunk screws (holding)

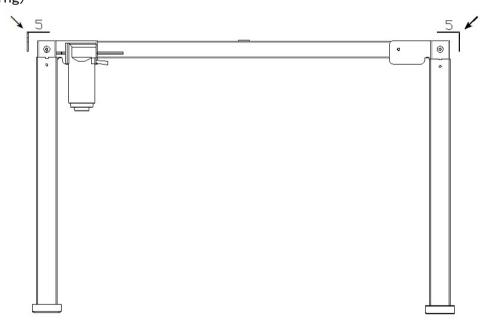

Loosen the two locking joints on the hexagonal drive assembly slightly so that the hexagonal bar inside can be pulled out. Then drive the hexagonal assembly into the motor end of the short hexagonal rod (left picture), After completion, extend and poke the long hexagonal rod in the hexagonal drive component into the column without motor (right picture). Finally, adjust the aluminum tube to the appropriate position and then lock the two locking joints



- ➤ Take out the Controller (⑥), Handset (⑦), Power cable (⑧), according to the interface of the motor line, adapter, power cord inserted in the hand-controlled all-in-one machine, and finally the power plug into the 110V or 220V socket can start to work
- ➤ After the table frame is installed, we suggest that you switch on the power supply for trial operation, and observe whether the table frame rises and falls normally
- ➤ Please restore the table frame and cut off the power supply before installing the panel. We recommend that you drill the holes for the table frame and table top fixation in advance. Note: Check both ends of the desktop to ensure that there are no holes on the desktop. This will make it easier for the screws to drill into the tabletop material. Do not use countersunk screws to fix the table, this will cause strong pressure to the table. Ensure that any screws used do not puncture the table top and damage the material.
- > Fastening the platform and table top with self-tapping screws (12)
- Make sure there are no obstructions in the table passage and that all cable lengths are adjusted for height changes
- ➤ Press and hold the key for 3 seconds, the hand controller displays (Reset), and then release it, the table starts to move down to the end and rebounds to a certain height, the reset is completed and the minimum height is displayed
- \triangleright Select the appropriate height, press the S or M key, select 1/2/3

IV. Troubleshooting

1. Reset instructions

The newly installed desk (showing E10) needs to be reset after re-plugging in the connector,

if there is an error message on the hand controller, there is no response when trying to raise or lower,

unplug the power cord;

reinsert the power cord;

press and hold the down button of the hand controller until the post reaches its lowest point and the reset mark appears, releases the lower button, the hand controller will display the height, and your standing desk will be used

2. Common troubleshooting

Resistance protection: display "E02", the desktop will vibrate, be impacted or the desktop is tilted during the exercise, and the alarm will be stopped immediately, and the reverse motion will be automatically released after the set distance, or press any key to stop and release during the reverse operation.

It should be checked and ensured that the table will not vibrate greatly, hit obstacles or tilt during operation.

Overheating protection: display "Hot", continuous long-term operation may activate this protection, you should re-power on or wait at least 18 minutes before using it.

Motor abnormal protection: display "E10", power off, recheck and make sure the connection between the motor and the controller is reliable, and then power on again

Overload protection: display "E20", this alarm appears when running upwards, you should remove some heavy objects on the table before running; if this alarm appears when running downwards, you should cut off the power, remove some heavy objects on the table, and then restart

Power-on

Undervoltage protection: display "E31", power off, recheck and make sure the connection between the power supply and the controller is reliable, and then power on again

Overvoltage protection: display "E32", power off, recheck and make sure the connection between the power supply and the controller is reliable, and then power on again

3. Safety reminder

When power is cut off or the power cord is unplugged, manual reset is required (please refer to the reset instructions above)

The design work system of this product is 10% (2 minutes of continuous work, 18 minutes of rest)

Children need to use this product reasonably under the supervision and company of

Do not open any parts: columns, controllers, hand controls, to prevent damage to the product and electric shock, etc.

Keep all electrical parts away from the liquid